




2. Install two lower Black Rods with 3. Thread Orange sleeve over Black Rod. Coupling Tubes up, in angled Pipes Make sure BowNet logo isn't up side down

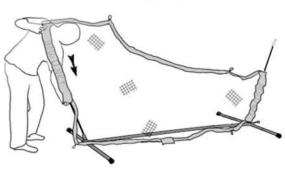

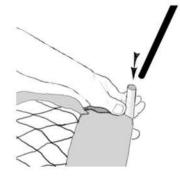


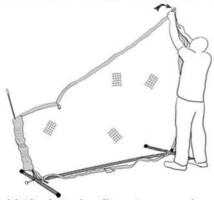

4. Repeat with Orange pocket over other Black Rod.

Rod Coupling Tubes.

5. Take Black Rod and slot into lower 6. Hold Black Rod pulling Orange sleeve up and loop White Cord over rod top See #8.

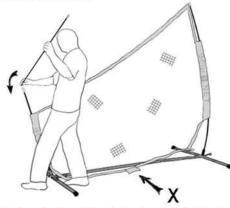



7. Take the last Black Rod and slot into Rod Coupling Tube.

8. Grip Black Rod pulling Orange sleeve up and loop Cord over Poll Top



1 year limited Manufactures Warranty on Manufacturing defects only. 30 day money back guarantee.

10. Wrap Velcro (X in Fig 7) around frame

*CHEAPBATS.COM* 1-800-589-4487